



## **Manual Update Instructions**

1. **Download** latest software from X1 RGB product page
2. **Install** X1 RGB software
3. **Open file explorer**, select **This PC** or **Computer**
4. Open **C: drive**
5. Open **Program Files** or **Program Files (x86)** Folder
6. Select following path: **C:\Program files(X86)\Tt\X1 RGB\fw**
7. Execute **X1 RGB Firmware Update.exe**
8. Wait for update to complete
9. Reboot system